



ACCESS

ELEVATOR

Stay in the home you love – Get the Access you need!



Would you like to gain more independence within your home?
Let the experts at Access Elevator help you enjoy the home you love.

Call us today to schedule your free consultation.

888-668-5438

Stair Lifts

Does it hurt when you climb the stairs?
Finding the right stair lift is easier than you think.



STEP 1: Acknowledge the need for a lift.

If climbing the stairs causes you pain, or leaves you out of breath, it's time for a better solution.



STEP 2: Give us a call.

We'll provide a free, no cost, in home estimate and help you decide if you want to lease or purchase a new or used unit. Our salesmen will help you find the best solution for your home and your budget.

STEP 3: Quick Installation.

Have your lift installed in as little as a few hours. Our professional mechanics will give you step by step instructions making sure you know how to use your new lift.



STEP 4: Rediscover the home you love.

Enjoy your new lift and have peace of mind with one of our hassle-free maintenance warranties. When you need an accessibility solution, Access Elevator has you covered.

For Straight Stairs

Our stair lifts, wheelchair lifts, and home elevators are designed with you, our customer in mind. We are partnered with the best brands in the industry and our expertly trained salesmen and technicians will help you make an informed affordable decision.

Retractable Rail



The straight stairlift has an optional retractable rail to avoid tripping hazards at the bottom of the stairs.



For Stairs That Turn



Compact and easy to use, our affordable curved stair lift options travel along a rail that is custom-made for your stairs. This versatile curved design allows your stair lift to be placed on either side of the stairs, making the best use of a narrow staircase enabling you to make the most of your own home – without having to move.

Enjoy a variety of seat cushion color choices.




At Access, we know how to make the best use of the space available - helping to blend your stair lift, wheel chair lift, or elevator discretely into your life. Give us a call today.

Residential Elevators

Whether you're looking at new construction or retrofitting an existing home, elevators can provide a safe and convenient way to get between floors.

All of our elevators are custom-built, American made, and designed with you, our customer, in mind. Make yours a focal point or incorporate it into the overall design.

You may be surprised just how affordable today's best home elevators can be.

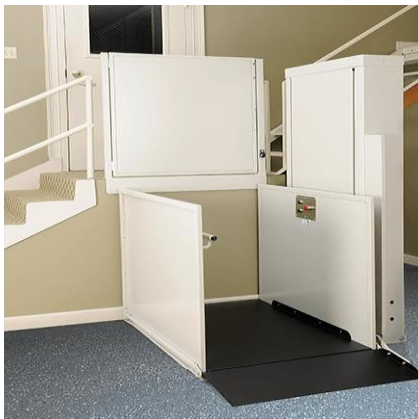

Wheelchair Lifts

Our platform wheelchair lifts are similar to stairlifts and are designed to overcome architectural barriers with platforms rather than stand-alone seats. Designed for ease of installation, a cost-effective platform can create convenient access without compromising the character and design of your home.

ACCESS

ELEVATOR

888-668-5438

www.accesselevator.com

Member of the National Association of Elevator Contractors



Siena

For Straight Stairs

Compact and easy to use, the Model 600 with Siena chair is a versatile stairlift for straight stairs - well-equipped as standard, with a range of options if needed. Sturdily built to carry up to 350lbs, the Siena can be folded up easily without bending over, which is especially helpful at the top of the stairs.

The slim-line rail sits close to the wall and was designed for narrow stairs with a door at the top, making the Siena ideal for basement stairs. With constantly recharging batteries to ensure that your stairlift is always ready for use, a wide seat and footrest, and optional retractable rail (if the rail protrudes at the bottom of the stairs), the 600 Siena is a class-leading choice from Stannah.



With its narrow rail and slim design, this stairlift takes up little room. A remote at each landing allows the chair to be called or sent away.

Stannah

The Stairlift People



Simply press a button to fold and unfold the Siena's footrest, no need to reach down or bend over.



A gentle hand on the control sends the Siena smoothly up or down the stairs.



The seat swivels to face the top landing, blocking the stairs behind you, for added safety.

Siena 600 Key Features

Upholstery

Comfortable, waterproof upholstery, available in six colors.

Chair width options

Standard model is 19½" between the armrests.
Slim model is 16" between the armrests.

Easy-to-use controls

The slimline control allows you to use any part of your hand to operate the stairlift.

Swivel levers

Use the levers, or optional one or two-way powered swivel, to get on and off your stairlift in the safest position at the top or bottom of your stairs.

Adjustable seat height

Set during installation so that your stairlift is comfortable and tailored to fit your needs.

Key Lock

The key lock prevents unauthorized use.



Model shown:
Siena chair with Tan upholstery

On/Off switch

Conveniently placed On/Off switch prevents the chair from moving unexpectedly.

Powered footrest

Folds the footrest up or down. This makes it easier to get in and out of the chair, and avoids the need to bend when folding the footrest.

Seat belt

Mounted on the armrest within easy reach. Fastens and unfastens with one hand.

Safety sensors

Stop the stairlift if it meets an obstruction.

Armrest safety

The down-side armrest must be lowered when riding the chair.

Rated load

One person, 350lbs

Upholstery Colors



Tan (standard)



Ivory



Cranberry



Pine



Walnut



Midnight

Stannah

Scout

For Straight Stairs

Stannah

The Stairlift People

Designed for efficiency and reliability, the Scout from Stannah will help you enjoy the full use of your home. The Scout meets all the quality and safety standards that set Stannah apart.

Versatility is built-in. The Scout can be installed on narrow stairs, including those with a door close to the top step. The batteries recharge constantly, so your Scout is always ready for use, even during a power outage. Thoughtfully engineered for ease-of-use, the Scout features a wide seat, large footrest, full-length armrests and remote controls on both landings, so you can also use the chair to carry laundry or groceries up and down the stairs.

The Scout: a perfect blend of quality and value.



Enjoy the full use of your home with the Scout stairlift from Stannah

Scout 600 Key Features

Adjustable seat height

Set during installation so that your stairlift is comfortable and tailored to fit your needs.

Ergonomic controls

Conveniently located on the end of the armrest and designed for arthritic fingers.

Swivel levers

Use the levers to turn the chair, so that you can get on and off your stairlift in the safest position at the top of your stairs.

Remote controls

Located on both landings, allow you to call the lift up or downstairs.



Upholstery

Comfortable, wipe-clean upholstery

On/Off switch

Conveniently placed On/Off switch prevents the chair from moving unexpectedly.

Seat belt

Attached to the chair for added security. (Seat belt not shown)

Rated load

One person, 300lbs

Safety sensors

Stop the stairlift if it meets an obstruction.




Stannah

Options

Stannah The Stairlift People

In addition to the standard Siena and premium Starla chair with their choices of upholstery, Stannah stairlifts can be supplied with options to make them even safer and easier to use.

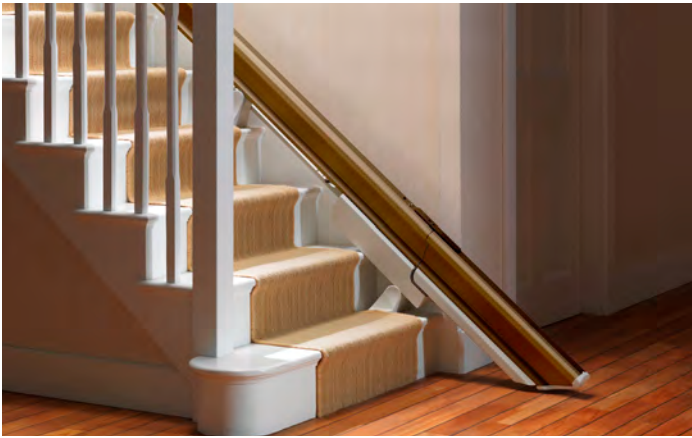

Retractable rail for straight stairs Raises and lowers automatically as the chair rides up and down the stairs. Used where the Model 600 rail would be a tripping hazard at the bottom of the stairs.



Chair width The Siena chair comes with comfortable wide armrests (left image) as standard. An optional narrow chair (right image) allows the chair to be installed on stairs only 27" wide.




Powered swivel Turns the chair to face away from the stairs, for ease-of-use and safety. By using the remote, the chair can be turned to block the top of the stairs before approaching to sit down.



Seatbelts The standard retractable seatbelt on the Siena and Starla chairs (left) can be upgraded to an 'Immobilizer seat belt' so that the chair will not operate from the armrest control until the seat belt is engaged. The immobiliser seat-belt is standard equipment on the Sadler chair. Our lap-diagonal and five-point seat belts (right) provide extra restraint over the shoulders and, if needed, between the legs.



Parking kit Allows any Model 260 chair to be parked a short way up the rail, conveniently out of the way.

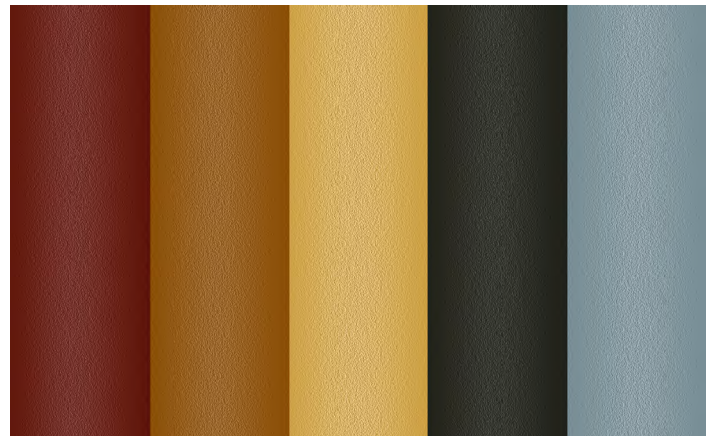

Rails colors In addition to the standard Pearl color, the Model 260 curved rail can be finished in Nut Brown, Ochre, Beige, Black and Gray.

Additional options for the Model 260 curved-rail stairlift

- Intermediate stop - used at mid-landings (such as on a split-level staircase).
- Heavy-usage kit - approximately doubles the number of journeys provided by the batteries.
- Rubber mats & Wall ties - used where the support legs cannot be fastened to the floor.
- Reduced footrest & Offset footrest - used on narrow or steep stairs.
- Door-closing device - used where the chair may run into an open door during travel.

Stannah

Stannah



Money-Back Guarantee



A Stannah stairlift gives you the freedom to enjoy the full use of your home, living independently in comfort and safety. As a company, we take pride in our remarkable level of customer satisfaction. We always give the best advice and strive to find the best solution for every one of our customers.

Because we care about your peace of mind, we give a 100% money back guarantee, a unique offering in the stairlift industry. It's very simple: within seven days of installation, if you are not completely satisfied with your stairlift, we will arrange to remove it and return to you all of the money you have paid. Period.

We want you to be comfortable that you have made the right decision in choosing a Stannah to meet your stairclimbing needs and this guarantee is designed to give you complete peace of mind.

This Money-Back Guarantee is provided by the company that sold you your Stannah Stairlift.

WARRANTY

Stannah

LIFETIME WARRANTY ON MOTOR & GEARBOX* AND TWO YEAR WARRANTY ON ALL OTHER PARTS

Your stairlift should be serviced annually, as recommended by ASME A18.1, the American national safety standard for stairlifts.

*To activate the lifetime motor/gearbox warranty you must register your Stannah stairlift within 30 days of installation.

Use the post card provided, or visit www.stannah-stairlifts.com/register
If not registered, the motor/gearbox warranty is five years from the date of installation.

Installation date.....

Installer.....

This warranty is provided by the company that sold you your Stannah stairlift. Warranty starts on the date of installation and does not cover repair or replacements necessitated by negligence, misuse, failure to properly maintain or service the stairlift as required, or any other reason beyond our control such as fire, water, theft etc. Warranty is not transferable.

May 24, 2017